

- Activate the top only with the engine running to prevent draining the battery.
- Before closing the top remove any foreign matter from the windshield frame.
- Keep to the safety instructions given previously.
- With boot open, top movement is automatically hindered. Always make sure the boot is perfectly closed before operating the top.

Press button **C** and the display will show the relevant message + symbol after completing the operation.

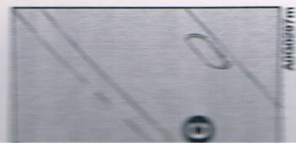


fig. 62

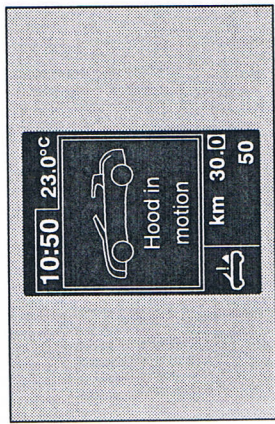


fig. 62

Keep button **C** pressed according to the required activation mode (opening or closing) for the whole operation. The display will show the corresponding message + symbol (fig. 62).

A beep will be heard and the display will show the relevant message + symbol after completing the operation.

Stopping the opening/closing operation

Releasing button **C** during opening/closing, will automatically stop the top. In this event, the display will show a warning message + symbol.

The movement operation can be continued after a few minutes by pressing the pushbutton again in the direction wanted (open or close).

From the position consequent to "short drop", side windows will reclose by keeping the button pressed at the end of the complete top opening or closing operation. Do not close the side windows by pressing the relevant buttons before completing the closing operation otherwise perfect adhesion of side windows to top rubber sealing gaskets will not be guaranteed.

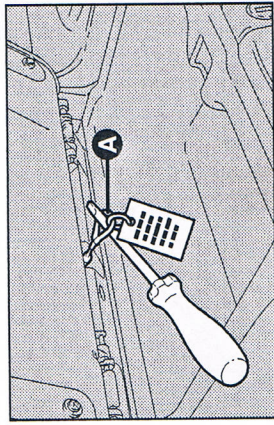


fig. 63

HOW TO OPERATE THE TOP BY HAND IN THE EVENT OF ELECTRIC FAILURE

Closing the top

In case of need, the top can be closed manually, proceed as follows:

- open the object holder behind the back rear seat;
- work on cable **A**. The cable has a slot that can be enabled with the screw driver included in the supply that allows to open the hydraulic system release emergency valve. There is also a tag that has the warnings that allow to avoid accidental enabling of the cable;