

fig. 64 AAG0098m

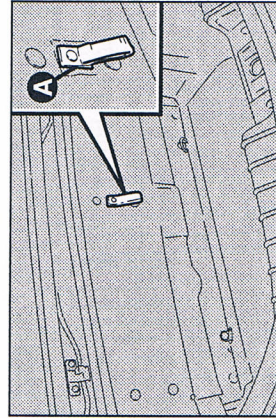


fig. 66 AAG0288m

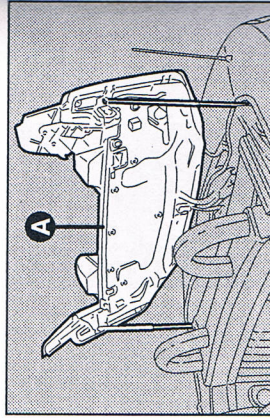


fig. 68 AAG0121m

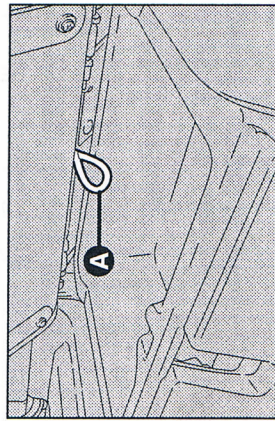


fig. 65 AAG0271m

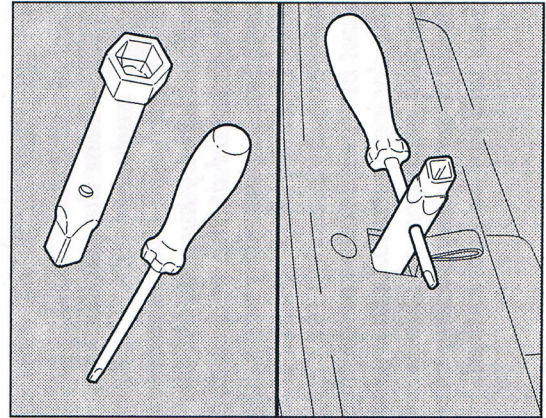


fig. 67 AAG0138m

□ open electrically the boot by pressing button **A-fig. 64** set under the central armrest or, if this is not possible, open the oddment compartment set behind the left seat and operate the manual boot opening cable **A-fig. 65**;

□ pull the tab **A-fig. 66** located on

□ with the relevant tube key located in the trunk and the screw driver (**fig. 67**) included in the supply turn the nut to open the lock of the top cover (a quarter clockwise turn right);

□ close the trunk and then open the top cover manually **A-fig. 68**. Make sure that to open the top cover while it turns does not damage the centre space of the trunk. If there is a risk of collision give a strong push downwards on the trunk door in the are of possible contact in order to allow it to turn;